



INSTRUCTION MANUAL

Vivid™

Codes:

SF-FG03-220

SF-FG03-024



English

INSTR-SF-FG03

STREAMLINE® disclaims all liability for damage or injury as a result of improper or unreasonable use or failure to follow operating instructions of the Vivid™ PRO

About your system

- | | | |
|----------------------------|----------------------------|-----------------------|
| A Main Power Switch | B LED Control Panel | C Nozzle Cover |
| D Flow Rate Knob | E Chemical Tank | F Trigger |
| G Lock Up Button | | |



Warning

1. Charge battery before operating.
2. If your fogger is the Li-ion battery version, to maintain battery health: Every 2 months, drain and then fully charge the battery. Do not charge for more than 10 hours.
3. Do not turn the machine upside down while it contains solution.
4. After spraying chemicals, spray clean water.
5. Do not splash any liquid on machine.
6. Avoid spraying strongly-corrosive chemicals if possible. Otherwise, immediately spray clean water.
7. When adjusting flow rate, be careful where the nozzle pointed.
8. Before storing, rinse solution tank with clean water.

 
Operation Manual

1. Fill solution tank and ensure the tank cap is screwed on securely. If your fogger is the Li-ion battery version, ensure the battery is charged.




2. Turn on the main power switch

Main power switch

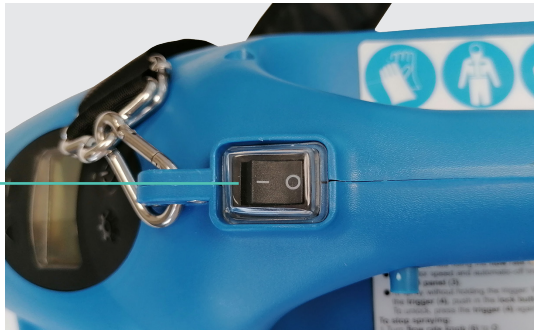

3. Press ON/OFF button

 
ON/OFF button

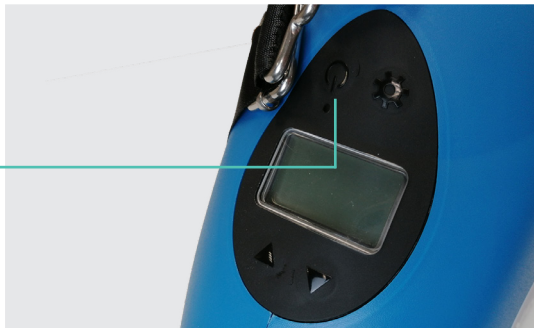

4. Open flow rate knob

"0" is off

 Flow rate knob

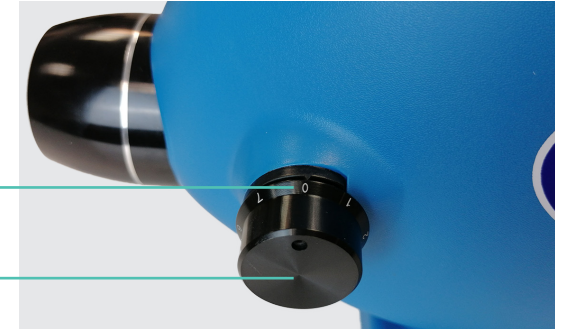

5. Pull the trigger to spray, release to stop spraying

Trigger



Press Trigger

Release Trigger



- To spray continuously, use the lock up button to lock the trigger in the pulled position.

ON/OFF button



 
- To adjust flow rate or droplet size, use the flow rate knob. Turn flow rate knob counter-clockwise to increase flow rate and droplet size.

To stop spraying

- Release trigger



- Dial Down the flow rate knob

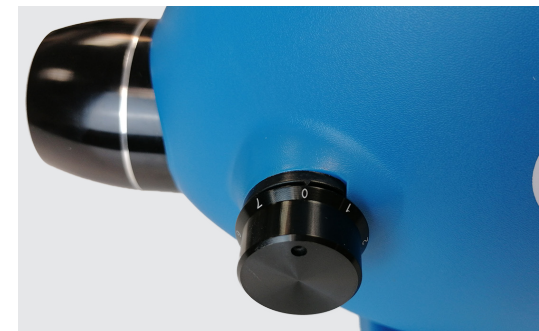


- Press ON/OFF button

ON/OFF button



- Turn off the main power switch on the handle

 
Main power switch

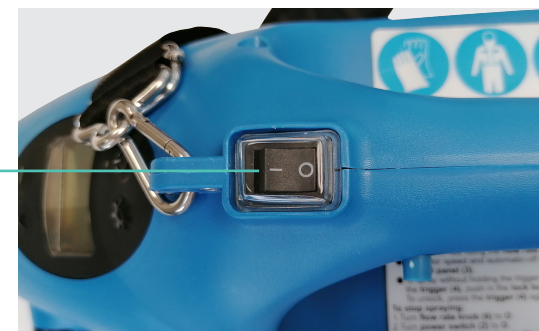


Charging the battery

(This is only applicable if you have the Li-ion battery version)

 1. Push the locker button

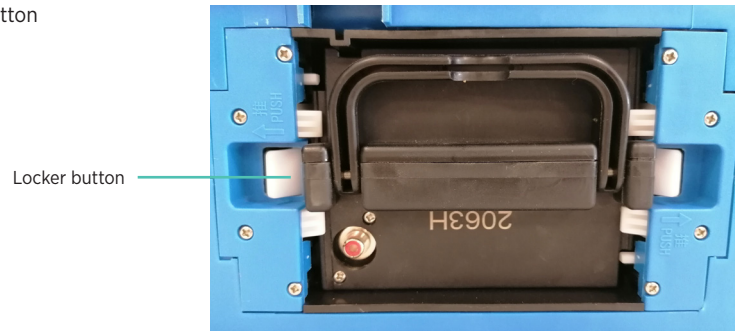

 2. Remove battery

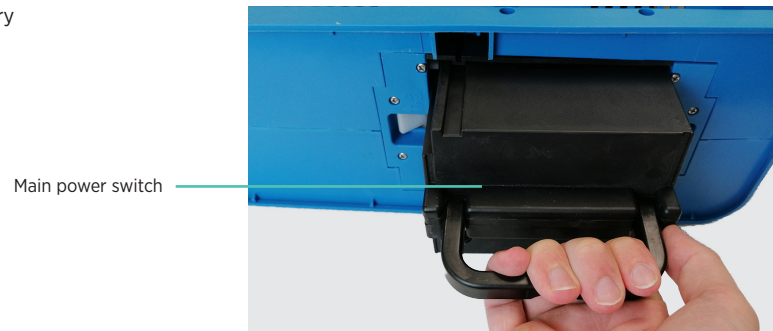




3. The battery can be charged after it is removed.







   4. A green indicator light means charge is complete.

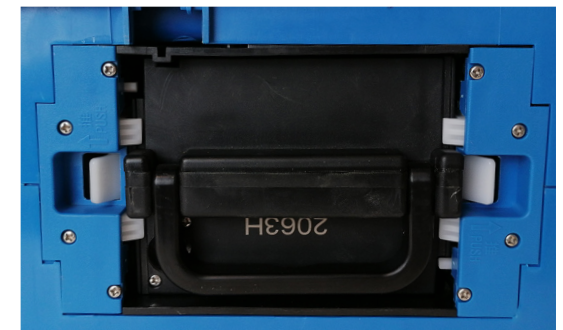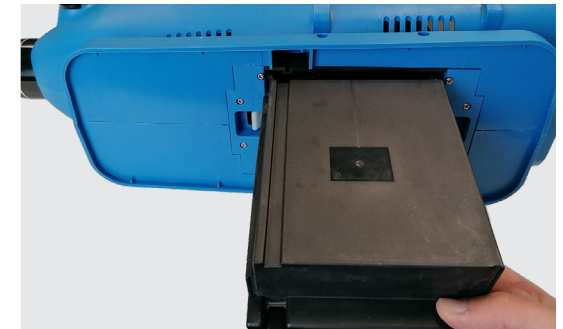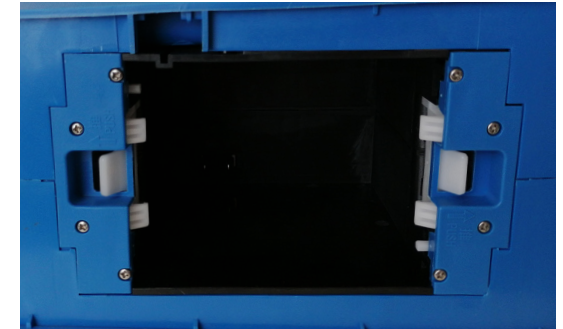5. Reinsert battery







Attention: Upper side is with groove.




Adjusting the speed of the motor

1. Press  twice
2. Press   to select the desired limit
3. Once speed is selected, press  and you have set the new speed

Activating the timer & setting a time limit for fogging

1. Press  once
2. Press  to select "timing"
1. Press  again
2. Press   to select the desired limit
3. Once the timer is set, press  twice

Trouble shooting

The fogger is turned on but wont start up by pressing  button?

5. Turn the power off at the main power switch and then turn back on.



Setting Up the Vivid™ PRO Fogger before use:

1. Firstly ensure you're using the correct PPE for the environment you're working in. e.g. facemask, eye goggles, gloves and body coverall
2. If you're using Vivid™ SENSE solution this can be poured straight into the solution tank without being diluted.
3. Remove the tank lid and carefully fill the tank with fogging solution ensuring solution is not spilt on the Vivid™ fogger. Once full, screw the lid back on and you're ready to start

Fogging method:

1. Before you start, open any windows in the area you're fogging.
2. Plan your route for fogging, with the exit to the room behind you
3. Switch on the Vivid™ PRO Fogger and move it from side to side working from the ceiling down to the floor ensuring all surfaces have a good covering.
4. When complete, switch off the machine and exit the room.
5. If you're using the Vivid™ SENSE Fogging Solution, an internal unventilated room will require up to 30 mins stand time before re-occupation, where as a well ventilated area will only require up to 15 minutes.

STREAMLINE® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If **STREAMLINE®** receives notice of such defects during the warranty period, **STREAMLINE®** will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by **STREAMLINE®**.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by **STREAMLINE®**.

The customer is responsible for the cost of return of the defective part. If warranty is approved, **STREAMLINE®** will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of **STREAMLINE®**:

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by **STREAMLINE®**, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to **STREAMLINE®**.

This warranty constitutes the exclusive remedy of any purchaser of a **STREAMLINE®** unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and **STREAMLINE®** shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.



Why STREAMLINE®?

Flexibility

- **STREAMLINE®** systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

Quality

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the **STREAMLINE®** name
- All **STREAMLINE®** products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

Service

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all **STREAMLINE®** products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you the correct item and arrange a collection of the wrong item without any quibbles
- **STREAMLINE®** is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.



MANUFACTURED
IN THE
UNITED KINGDOM



CHECKED AND
TESTED BY
QUALITY CONTROL



Hamilton House, 8 Fairfax Road,
Heathfield Industrial Estate,
Newton Abbot
Devon, TQ12 6UD
United Kingdom

Telephone: +44 (0) 1626 830 830

Email: sales@streamline.systems

Visit: www.streamline.systems



INSTR-SF-FG03